

TO ORDER CALL: TOLL FREE 1 866-577-6406



"What Ever It Takes"

## LOCOMOTIVE ENHANCEMENTS

### *27 Pin MU Tester*



**PowerRail # MAE-05 Tester**

- Simple Operation
- 110 Volt Required
- Class 1 Approvals

Operation instructions:

1. Plug in the Power Cord.
  2. Turn the selector switch on the right side of the box to the "on" position.
  3. Wait for the operator interface to power up and run a self-test.
  4. When prompted by the display, press the Escape key. The display will show "Ready to Start Test"
  5. Plug the Jumper Cable into the connectors on each side of the tester.
  6. Press F1 to start the test. The display will show "Test in Progress"
  - 7a. If the cable is good, when the test is completed the display will show "Test Passed."
- Removing the Cable from the tester will display "Ready to Start Test" again.
- 7b. If the cable fails the test, all faults such as open or crossed wires will be displayed.
- Pressing the F2 key will reset one fault at a time, allowing identification of the reason the Cable failed, until all of the faults are reset.

NOTE: Pressing F3 will abort a test in progress at any time and allow all faults to be reset by pressing F2 only once.

### **PowerRail Distribution Inc.**

205 Clark Road Duryea, Pa. 18642  
Phone: 570-883-7005 Fax: 570-883-7006  
Sales@EPowerRail.com

**www.EPowerRail.Com™**

**www.EPowerRail.Com™**